

# Maintenance

---

Perform a walk around inspection of the machine.

**Daily**

Blow off the entire machine with compressed air.

Check the hydraulic fluid levels and refill with Mobil DTE 24 or equivalent when required.

**Weekly**

Check the gauges on the hydraulic filters, replace if necessary.

Inspect and check the drive chain.

**Monthly**

Correct the chain belt tension if necessary. The chain belt should have no more than 1” of lift when raised halfway between the head shaft and idle sprocket.

To re-tension the chain, loosen the lock nut and raise the tensioner to achieve a lift of less than one inch. Retighten the lock nut. If this tension cannot be achieved, either remove a full link with a half link or install new feed chain.

Grease the entire machine according to the Lubrication Chart in the Lubrication Section of this manual.

**Greasing**

# ***Maintenance***

---